

Superior Signal Company LLC

Mailing Address:

P.O. Box 96
Spotswood, NJ 08884

Shipping Address:

178 West Greystone Road
Old Bridge, NJ 08857

Telephone: (732) 251-0800

Fax Line: (732) 251-9442

www.SuperiorSignal.com

SUPERIOR MODEL 10, 15, 20, 25 S/L GASOLINE POWERED BLOWER PARTS

<u>Part No.</u>	<u>Item</u>
501	Blower Housing Model 20-S/L
502	Blower Housing Model 10-S/L
503	Blower Wheel
504	Blower Shaft
505	2 Wheel Shaft Bearing/Wheel Bearing Collars
506	Pair of Base Angle Brackets
507	Fiberglass Blower Base/w Rubber Gasket Underside
509	Blower Carrying Handles
510	3 ½ hp Briggs & Stratton Gasoline Engine
511	3" Engine Pulley
512	8" Engine Pulley
513	Pulley Guard/with Belts
518	Alternate Pulley Kit
519	Fluid Conversion Kit
523	Micro Control Valve w/connector
524	Fluid Injector
525	Copper tubing for Conversion Kit
527	Pump Bottle for Conversion Kit
537	tube w/connector for blower pump bottle
538	Conversion Chamber for 10/20S
542	Pair Handle Supports
543	Rubber Gasket-2 piece
544	Fuel Tank
545	Micro Control Valve Bracket
20-S/L Blower Housing Includes:	Blower wheel, blower shaft, 2 wheel shaft bearings with bearing collars, smoke bomb rack, auxiliary outlet with cover, slide damper, pair of base angle brackets, brackets for handles, and damper handles.
10-S/L Blower Housing Includes:	Blower wheel, blower shaft, 2 wheel shaft bearings with bearing collars, smoke bomb rack, pair of base angle brackets, and handle brackets.

SUPERIOR MODEL 5E BLOWER PARTS

515	Blower Wheel/with 12 Volt Motor
516	Blower Wheel/with 110 Volt Motor
517	8' X 4" Flexible Hose/with connectors